




**Product Name: CITY WL**

## General information

- This luminaire must be installed in accordance with the latest edition of the IET Wiring Regulations and local Building Regulation by a qualified competent person.
- The mains power supply must be turned off before inspection, installation or removal of the luminaire, ensuring that the supply is locked off to prevent inadvertently switching the supply on.
- It is the installer's responsibility to ensure that the installation is suitable for the total load of the luminaire(s). The supply cable fuses/circuit breakers must be correctly rated for the electrical load and taking into account for any transient inrush currents that may occur.
- It is the installer's responsibility to ensure that the environmental operating and storage conditions are complied with and that any fire risks are considered.
- Do not perform insulation strength or insulation resistance tests on the installation with the luminaire(s) connected, this can damage the luminaires and give erroneous readings.
- Do not loop-in supply cables at the luminaire supply terminals unless there is provision for 2-way connection at the terminals.
- The light source contained in this luminaire must only be replaced by Tamlite Lighting or an appointed service agent.
- Emergency lighting luminaires must be installed and maintained in accordance with the emergency lighting standard BS 5266-1.
- To ensure that the product warranty remains valid, the luminaire must be installed and maintained in accordance with these installation instructions and the product must not be modified in any way.

-  Luminaires marked with this symbol must not be covered with thermally insulating material.
-  This symbol on covers over light sources indicates dangerous live parts do not operate the luminaire with this cover removed.


## Dimensions

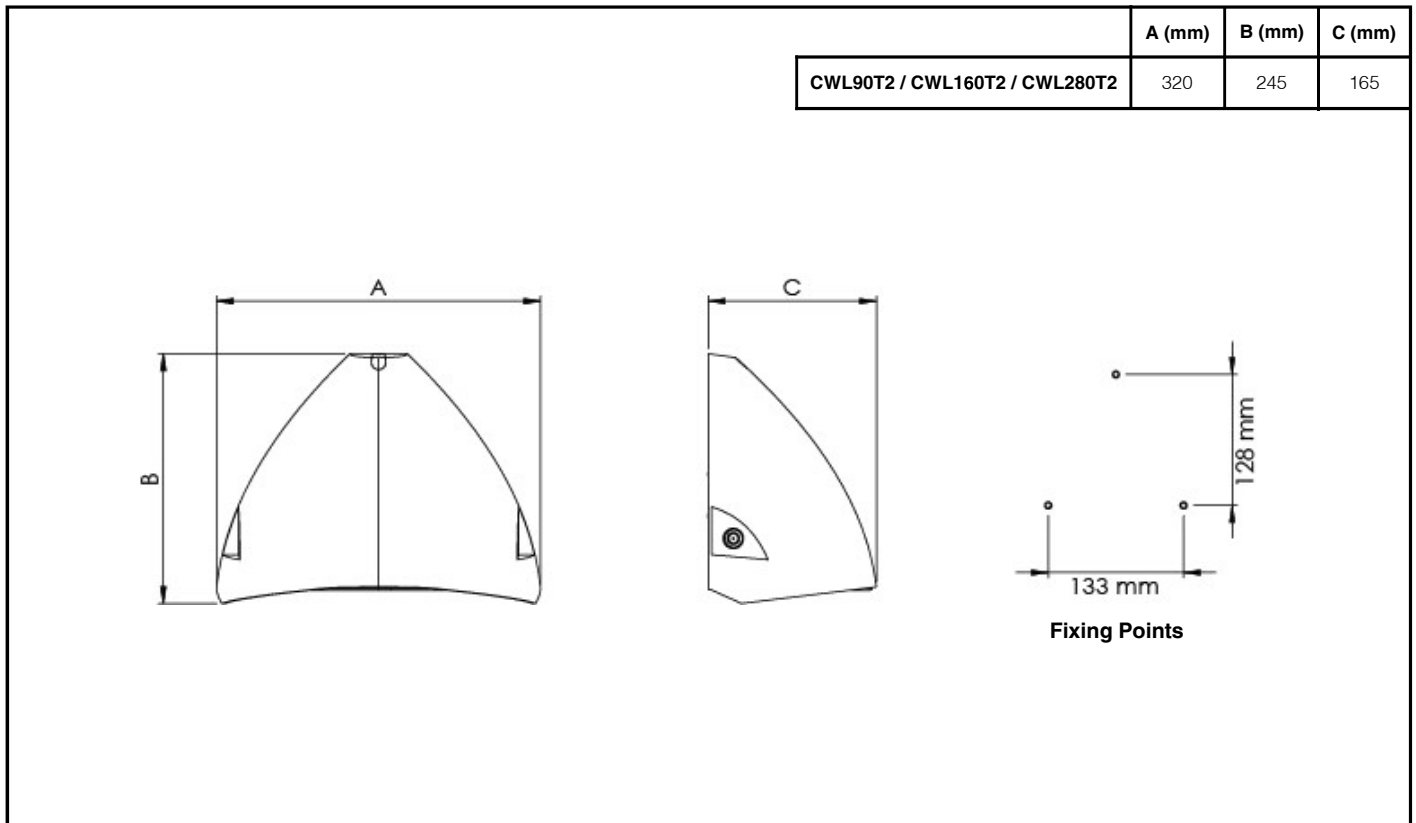

**Page 1 of 3**

Tamlite Technical  
Stafford Park 12,  
Telford, Shropshire,  
TF3 3BJ

+44(0)1952 292441  
technical@tamlite.co.uk  
Document No: V1



Product Name: CITY WL

<p>1</p> <p>Remove the product from its packaging.</p>	<p>2</p> <p>Remove diffuser from luminaire body.</p>
<p>3</p> <p>Remove gear tray, disconnect retention strap and earth connector.</p>	<p>4</p> <p>Drill fixing points and secure mounting bracket to mounting surface.</p>
<p>5</p> <p>Bring supply cable through the cable gland and insert into cable entry point.</p>	<p>6</p> <p>Offer luminaire body up to the mounting bracket.</p>
<p>7</p> <p>Slide the luminaire body down into the bracket ensuring bracket engages.</p>	<p>8</p> <p>Secure luminaire body to the mounting surface with the final fixing point.</p>

Page 2 of 3

Tamlite Technical  
 Stafford Park 12,  
 Telford, Shropshire,  
 TF3 3BJ

+44(0)1952 292441  
 technical@tamllite.co.uk  
 Document No: V1

			220-240V 50/60Hz		IP66	IK10	<b>ta</b> -20°C to 25°C 5°C to 25°C for M3 variants
--	--	--	---------------------	--	------	------	--

Product Name: CITY WL

<p>9</p> <p>Attach screw cover over fixing point.</p>	<p>10</p> <p>Feed supply cable to the terminal block.</p>
<p>11</p> <p>Terminate the supply cable according to the markings on the terminal block.</p>	<p>12</p> <p>Re-attach geartray retention, connect battery and earth plug, replace geartray.</p>
<p>13</p> <p>Replace diffuser using the three fixing screws.</p>	<p>14</p>